


HYUNDAI TUCSON 2WD / 4WD

No.: 2357.1 Engine + gearbox

Year: 2015-
Engine: 2.0MPI; 2.0CRDI; 1.6T (177hp)
Transmission: AT

FITTING KIT

1. Bolt M6x40.....	2 pc
2. Bolt M8x20.....	3 pc
3. Washer 6.....	2 pc
4. Washer 8.....	3 pc
5. Insert nut M8.....	2 pc
6. Bracket.....	1 pc
7. Spacer.....	2 pc

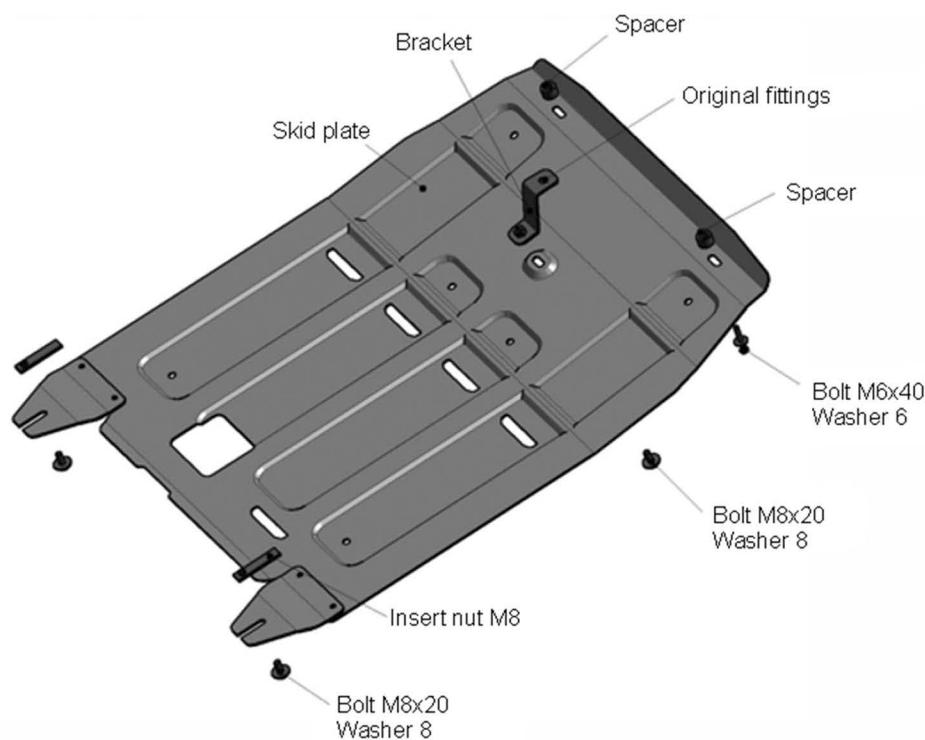

INSTALLATION INSTRUCTIONS

1. Skid plate is installed over factory guard.
2. Place insert nuts M8 into apertures in rear end of underframe, then screw bolts M8x20 into them.
3. Screw original bolt out of center part of factory plastic guard, then mount bracket to this point. Fix bracket with original fittings.
4. Screw two original bolts out of front part of factory plastic guard.
5. Place rear end of skid plate on mounted bolts M8x20, then fix its front end to original threaded apertures with bolts M6x40 and spacers.
6. Fix center part of skid plate to mounted bracket with bolt M8x20.
7. Tighten all screws (50 Nm for M10, 30 Nm for M8, 10 Nm for M6). Do not use pneumatic or power tools to tighten.