


VW PASSAT B5

No.:	5813.1 Engine block 5814.1 Gearbox
Body:	All
Year:	2001-2005
Engine:	1.6; 1.8; 1.8T; 1.9TDi; 2.0
Transmission:	All

FITTING KIT

1. Bolt M8x30.....	4 pc
2. Bolt M10x20.....	2 pc
3. Bolt M10x30.....	2 pc
4. Washer 8.....	4 pc
5. Spring washer 8.....	4 pc
6. Washer 10.....	4 pc
7. Spring washer 10.....	4 pc
8. Insert nut M8x30.....	2 pc
9. Insert nut M10x150.....	2 pc
10. Clamp.....	2 pc

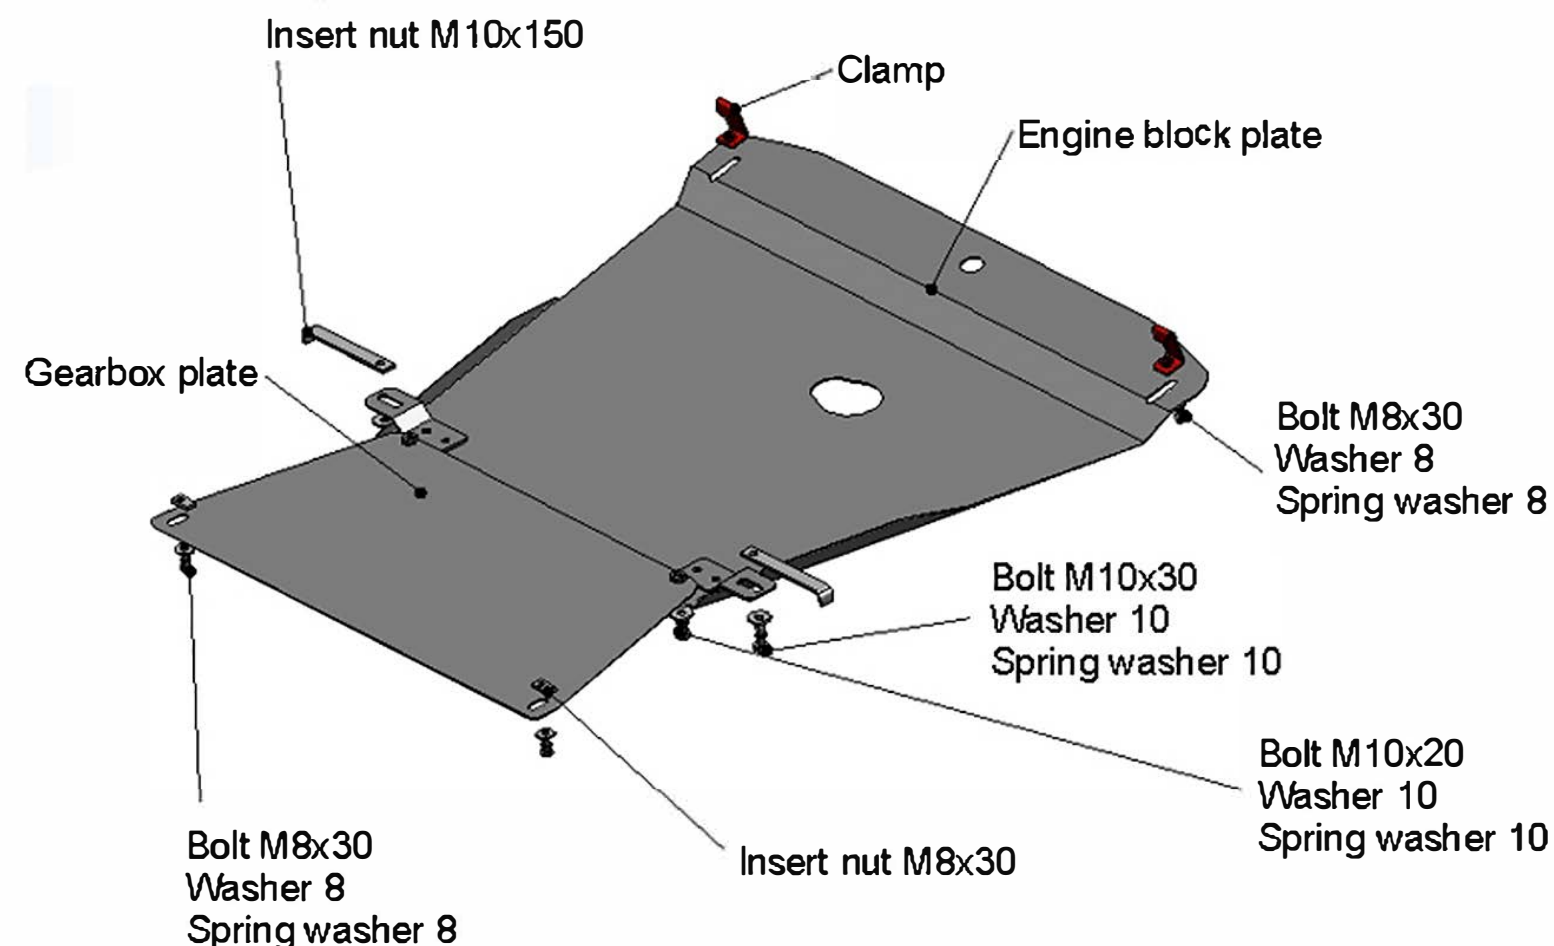

INSTALLATION INSTRUCTIONS

1. Remove original plastic guard.
2. Fix clamps to apertures of air pipes.
3. Mount insert nuts M10x150 to underframe.
4. Fix front end of engine block plate to mounted clamps, then fix its rear end to mounted insert nuts M10x150 with bolts M10x30.
5. Mount insert nuts M8x30 to the silents.
6. Fix front end of gearbox plate to rear end of engine block plate with bolts M10x20, then fix rear end of gearbox plate to mounted insert nuts M8x30 with bolts M8x30.
7. Tighten all screws (50 Nm for M10, 30 Nm for M8, 10 Nm for M6). Use of pneumatic tools is prohibited.