

*For more info about compatibility with other models
please see the sticker on the skid plate


VOLKSWAGEN TIGUAN

No.: 5831.1 Engine block & gearbox

Body: All
Year: 2008
Engine: All
Transmission: All

FITTING KIT

1. Bolt M6x25.....	3 pc
2. Bolt M8x25.....	5 pc
3. Bolt M10x30.....	2 pc
4. Washer 6.....	3 pc
5. Washer 8.....	5 pc
6. Washer 10.....	2 pc
7. Beam.....	1 pc

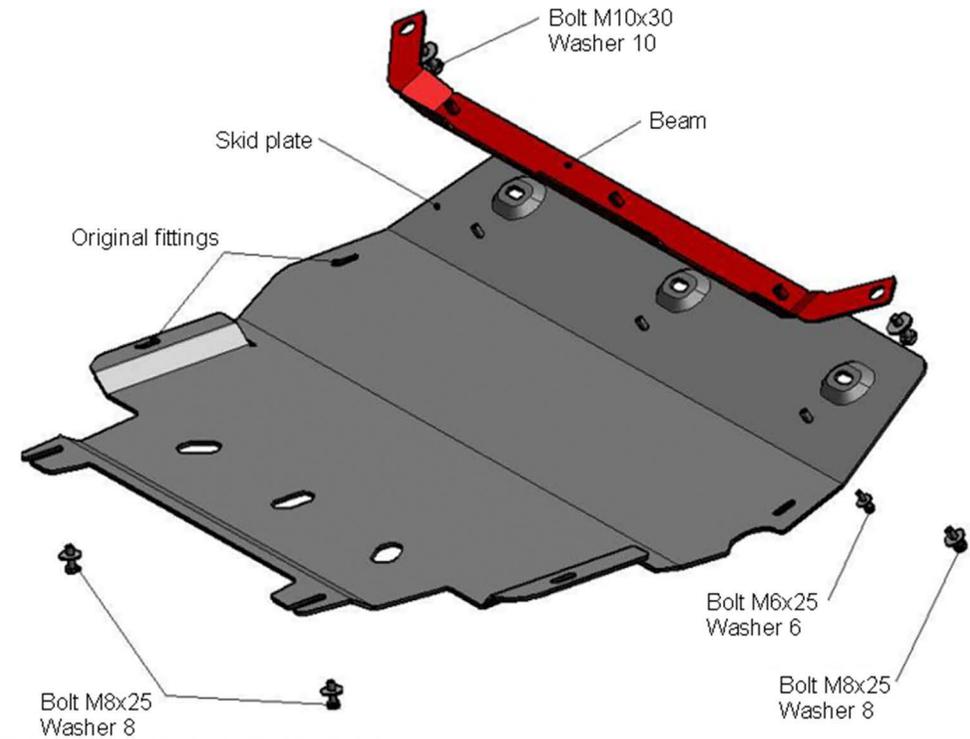

INSTALLATION INSTRUCTIONS

1. Remove original plastic cover.
2. Mount the beam to original threaded apertures with bolts M10x30. If there is an original beam, then mount skid plate to that.
3. Screw bolts M8x25 into original threaded apertures in rear part of underframe.
4. Place rear end of skid plate on mounted bolts M8x25, then fix its front end to the beam with bolts M8x25. If necessary, mount the original plastic cover with bolts M6x25.
5. Tighten all screws (50 Nm for M10, 30 Nm for M8, 10 Nm for M6). Use of pneumatic tools is prohibited.