

INSTALLATION INSTRUCTIONS

Warranty

The warranty period of the product is one year from the date of sale. If no seller's stamp, period of the guarantee starts from the date of assembly of the product. Warranty replacement is performed by the manufacturer or official dealer.

Note: During winter time, slight lowering of the rigidity of the gas strut might occur due to the properties of gas-filler and not to be considered as a defect

Date of assembling	QC
Date of sale	Stamp of seller

Gas strut kit for
Suzuki Vitara (2015-)

2A.ST.5503.1

Installation instructions



INSTALLATION INSTRUCTIONS

Content

Gas Strut 880018.....	2 pcs.
Bracket.....	2 pcs.
Hinge-bolt.....	2 pcs.
Washer 5.....	2 pcs.
Spring washer 5	2 pcs.
Inside nut M8.....	4 pcs.

Special washer.....	2 pcs.
Locking washer.....	2 pcs.
Inside plank.....	2 pcs.
Bolt M8x20.....	4 pcs.
Washer 8.....	4 pcs.
Installation guide.....	1 pc.

Important notes:

- 1) carefully read your instruction manual before installation
- 2) make sure that before and during the installation, the vehicle and the mounting area is clean
- 3) make sure that other areas and parts of vehicle located near installation area are protected from accidental damage
- 4) To avoid any damage never put tools on painted areas, control panel and central console of vehicle
- 5) Always use personal safety equipment if necessary during installation

Installation

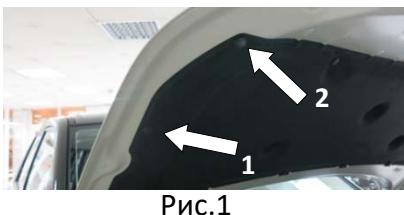


Рис.1

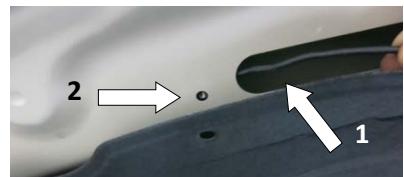


Рис.2

1. Remove caps (1) and (2) securing covering of the hood, (Pic.1). Hinge bolt will be installed instead of cap (1).

2. Holding a wire bar put the inside plank in the hole 1. Combine threaded hole of the inside plank with the hole 2 in the amplifier of the hood (Pic.2).



Рис.3



Рис.4



Рис.5



Рис.6



Рис.7

3. Screw the hinge bolt with spring washer 5 and washer 5 into the inside plank. Tighten hinge bolt using tool №10 with torque 10 Nm. (Pic.3).

4. Press down to the covering of the hood with special washer. Fix the special washer using locking washer. (Pic. 4) Mount cap (2) securing covering of the hood. (Pic.1)

5. Mount the inside nuts M8 under shown holes from the bottom through wheel arch (between wheel and fender). (Pic.5).

6. Mount the bracket. Tighten 2 bolts M8x20 with washers 8 using socket wrench №13 with torque 20 Nm. (Pic.6).

7. Install another attachment same way.

8. Pump the struts (put the strut against hard surface, then press and release it five times).

9. Remove a factory prop rod. Click attachment points of the struts on the hinges. Struts are installed the rod towards the fender. (Pic.7).

ATTENTION! NOT FOLLOWING THE INSTALLATION INSTRUCTION WHILE MOUNTING THE STRUTS CAN RESULT INCORRECT OPERATION OF THE PRODUCT AND DAMAGE OF THE VEHICLE.